


CUSTOM WAVEON®



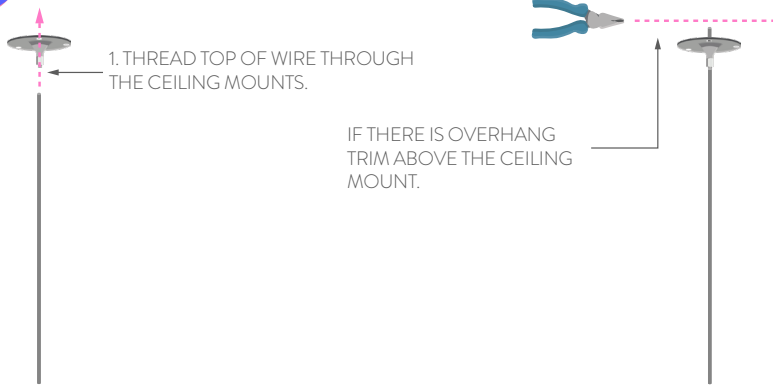

INSTALLATION GUIDE: HANGING WIRE KIT

STAGE 1




INSERT AND TRIM WIRES



KIT COMPONENTS


-  **SCREWS**
-  **ALUMINUM CRIMPS**
-  **CEILING MOUNTS**
-  **CABLE WIRES**

WHAT YOU WILL NEED

-  **DRILL**
-  **PENCIL**
-  **PLIERS / SNIPS**


STAGE 2

MEASURE AND DRILL MOUNTS

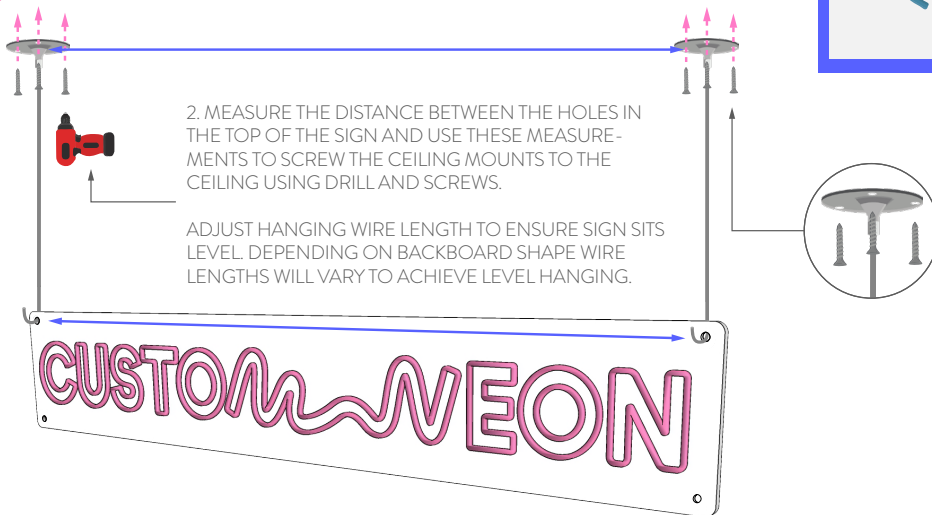

STAGE 3


INSERT CRIMP

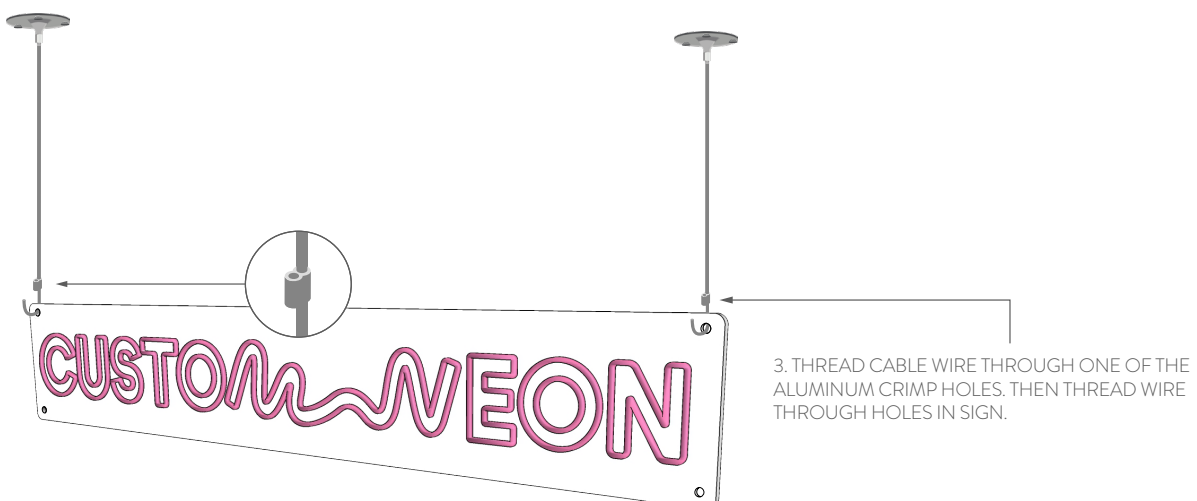

**STAGE
4**

CRIMP AND TRIM WIRES

4. THREAD WIRE BACK THROUGH THE OTHER HOLE OF ALUMINUM CRIMP. ENSURE 1CM OF WIRE REMAINS STICKING OUT.

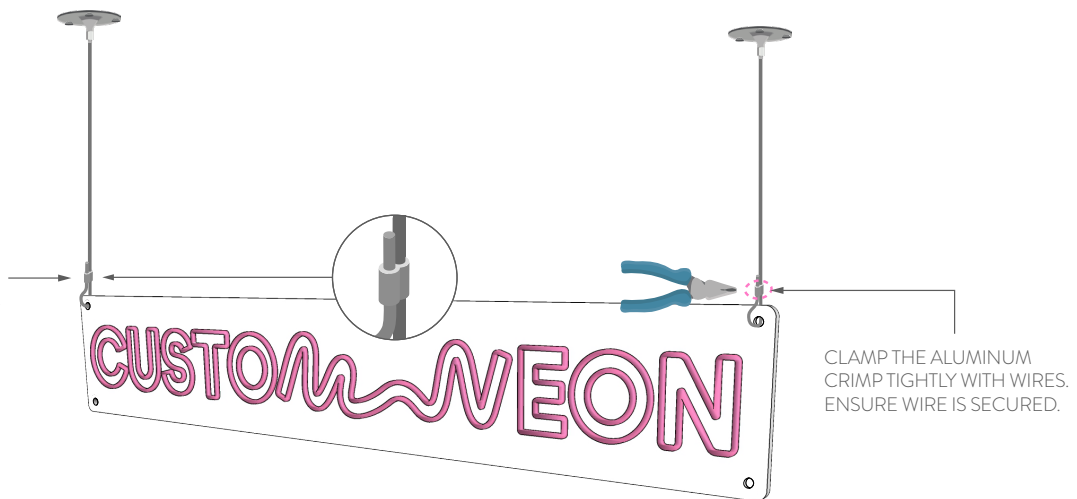

**STAGE
5**

ADMIRE SIGN

