

CUSTOMNEON®


INSTALLATION GUIDE: WALL MOUNTING KIT

STAGE 1-2

MARK WHERE YOUR SIGN WILL GO

1. HOLD YOUR SIGN TO THE WALL YOU WISH TO FIX IT TO. USING A PENCIL, MARK ON THE WALL THROUGH THE CENTER OF THE HOLES.


2. DRILL 0.9CM HOLES TO WALL MARKINGS.

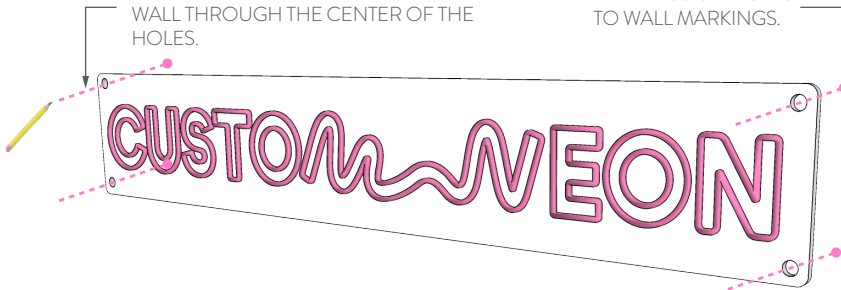

STAGE 3

FIX SPACERS AND SCREWS

3. PLACE WALL SCREWS INSIDE SPACERS. DRILL THESE INTO THE WALL.

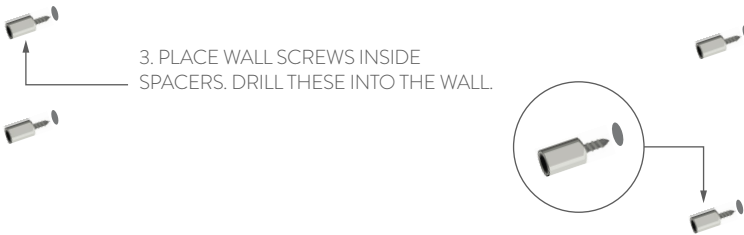


STAGE 4-5

FIX SIGN TO THE WALL


4. JELLY WASHER TO BE PLACED ON TOP OF EACH SPACER AND HOLES IN ACRYLIC SIGN LINED UP WITH SPACER BEHIND SIGN.

5. WALL MOUNT SCREWS TO BE TIGHTLY SCREWED INTO SPACERS BEHIND.

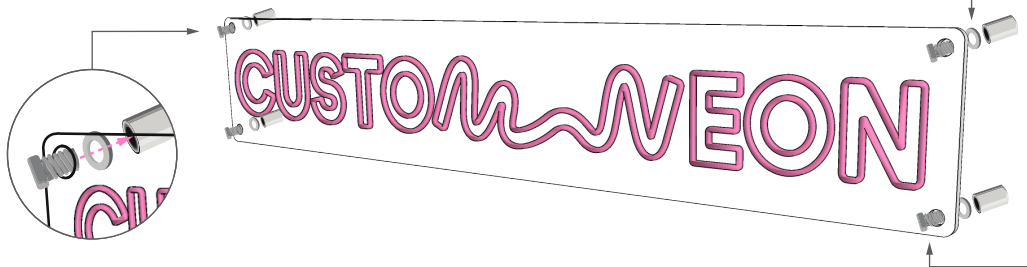

STAGE 6

ADMIRE SIGN

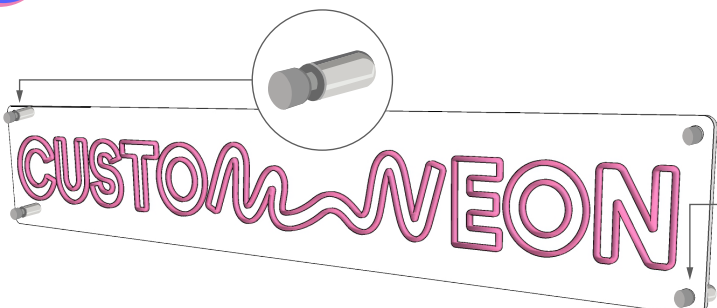

STANDARD MOUNTING KIT
ALLOWS THE SIGN TO SIT 2.5cm
OR 1" OFF THE WALL.

KIT COMPONENTS



WALL SCREWS



JELLY WASHERS



SPACERS



WALL MOUNT SCREWS

WHAT YOU WILL NEED



DRILL



PENCIL